




#M2 Moon Face Mask

ENGLISH

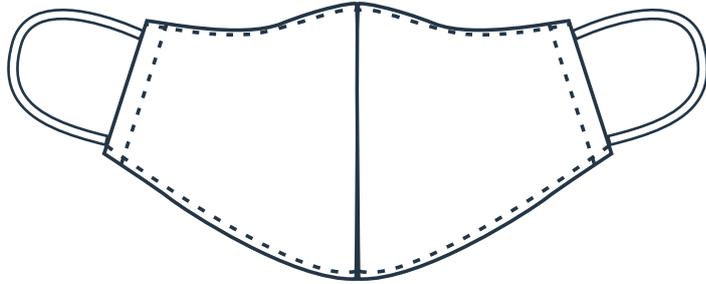

Materials:

-Elastic cord or tape for the sides of the face mask.

Making the face mask:

Trace around the pattern in the selected size and cut out two pieces for the exterior of the face mask and two pieces for the lining. Align the straight grain of the fabric with the grainline arrow on the pattern pieces before cutting out the fabric pieces.

The 3/8" (1 cm) seam allowances and the hem allowances are already included in the pattern pieces.

1. Join and sew the exterior pieces together at the centre (= curved part), with the right sides of the fabric facing together. Sew the lining pieces in the same manner. Make small cuts in the curved part of the seam allowance so the pieces are easier to manipulate when working.

2. Match the lining to the exterior of the face mask, with right sides facing together, and sew along the upper edge. Make small cuts in the curved part of the seam allowance so the pieces are easier to manipulate when working.

3. Unfold the face mask, opening the upper part so the fabric is on the wrong side, fold 3/8" (1 cm) inwards twice at the sides to make a double hem and work a row of stitching all around the edge to fix the seam in place.

4. Turn the face mask out to the right side, iron the upper edge and work a row of stitching along the top edge to secure the seam in place.

5. Place the lining and exterior pieces together again, with the right sides facing, to line up and sew the lower edge of the face mask. Sew then make small cuts in the curved part of the seam allowance so the pieces are easier to manipulate when working.

6. Turn the mask out to the right side through one of the side openings. Work a row of stitching along the lower edge to secure the lower seam in place.

7. Cut two pieces of elastic cord or tape and insert the ends of the elastic in the sides of the face mask between the exterior and lining fabrics. Before sewing, pin in place and try on for size. Adjust to the correct size and sew the ends of elastic cord or tape in place so that the sides remain open to insert a filter inside if necessary.

Find your size

Use the size chart to find the correct size.

SIZE	FACE WIDTH	FACE LENGTH
X Small (Little Kid)	8 3/4" (22.2cm)	4 3/8" (11.1cm)
Small (Kid)	9 1/2" (24.1cm)	4 3/4" (12.1cm)
Medium (Teen)	10 1/4" (26cm)	5 1/8" (13cm)
Large (Adult)	11" (27.9cm)	5 1/2" (14cm)
X Large (Adult)	11.75" (29.9cm)	6" (15.2cm)

